

# Quick Start Guide - Nabishi Internet radio - IR355S Azaan Version



Rear of radio showing power lead input and Ethernet connection socket

Thank you for purchasing our Internet based Digital Broadcast radio. We have made the installation process as easy as possible so that we can quickly connect you to the system and if you have purchased this radio for a local mosque, then that mosque will already be setup as your HOME CHANNEL in which case the radio will connect direct to your local mosque without requiring any input from you. If the mosque is not broadcasting then a message will tell you to either wait for your mosque to transmit or select another mosque from a list which is constantly updated as more and more services and mosques join our broadcast system. Please go to our website [www.azaan.co.uk](http://www.azaan.co.uk) for the latest list and information.

There are two ways to setup your Internet radio to your Broadband / Wifi Router (these are also called broadband routers). The easiest way is to connect a LAN cable into the back of the radio and the other end of the cable into the back of the router where there are usually 4 LAN or ETHERNET ports.

The other way is to connect via a WiFi connection and for this you will require a **SECURITY KEY** if your router has one enabled. Security keys are usually located on the back of a Router or you will need to ask your supplier to get the key. Once the key has been entered you will not need to do this again.

Once your Digital Azaan Internet radio is setup it will **AUTOMATICALLY** connect to your local or preferred mosque but you can change this HOME CHANNEL Setting by going to our website, [www.azaan.co.uk/home](http://www.azaan.co.uk/home) and selecting another mosque if you wish. Please register your receiver at this site to obtain a free warranty upgrade from 12 to 24 months!

## Connecting the power supply

Please remove the Internet radio from the box and connect the supplied power supply lead to the rear of the radio. Then switch on by pressing the POWER button.

**WARNING! Do NOT use any other power supply unit as this will damage the radio and will invalidate your**




Plug in the supplied power socket at the rear of the internet radio




Press POWER will switch on the radio

## Easy Connection - direct cable connection using an Ethernet or LAN cable (RG45)

This is the easiest way to connect your radio to the Internet and **requires no input from the user**. To make a direct LAN or Ethernet connection between your radio and your Wifi Router (also known as a Broadband Router) simply plug one end of a LAN cable - not supplied - (RG45) into the **Ethernet** socket at the rear of the radio and switch on the radio for a fast and easy connection to the Nabishi Digital Broadcast System.

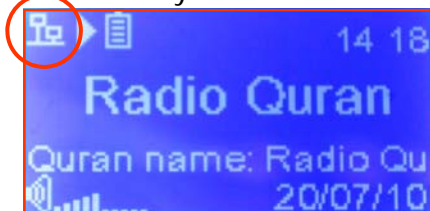

When connected by the LAN / Ethernet cable, this ICON shows "LAN CONNECTION"

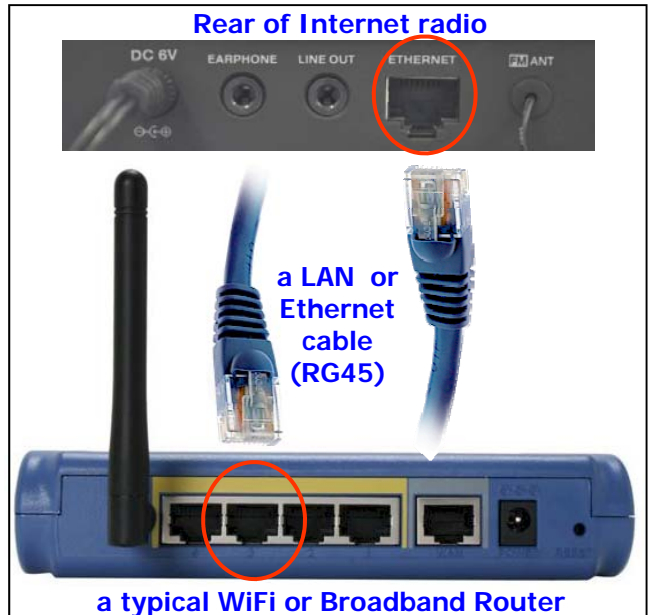

a typical WiFi or Broadband Router

Register your radio and get a free 24 month warranty at [www.azaan.co.uk/home](http://www.azaan.co.uk/home)

### Connecting to your WiFi Router for the first time



 
When the radio starts you will see this screen



followed by this one



radio starts boot up and goes to Router setup

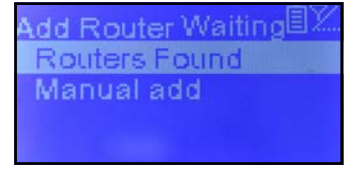

to select, press the enter button on the radio

### Use these buttons on the radio to setup the WiFi router connection



Input the password by **TURNING** Rotary Knob. **LEFT** or **RIGHT** to select one of the following characters:

0,1,2,3,4,5,6,7,8,9, period, space, @, a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z, A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, #, \$, %, ^, &, \*, (, ), space, -, +, =, /, [, ], , , ;, :

When all the numbers have been entered press the knob to **ENTER** on the last digit. Do not add a space



Use the **FORWARD** button to go to the Next position



 
Use the **BACKWARD** button to go back to the previous position



delete a character with the **PROG** (Program) key




Press knob **in** to **Enter**

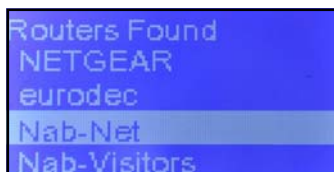


select your router



 
select the type of key

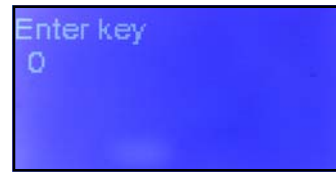

 
turn the rotate button to select the first number

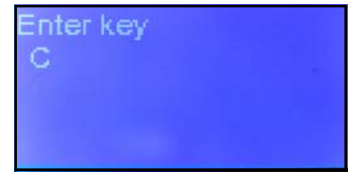

 after entering one character press **FORWARD**

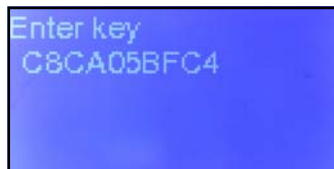

 repeat for other numbers and press **ENTER**

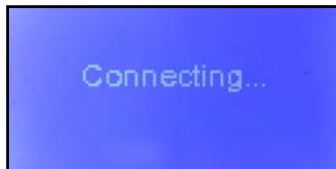


radio starts to connect



and connects to your router



 select another one if required or **WAIT**

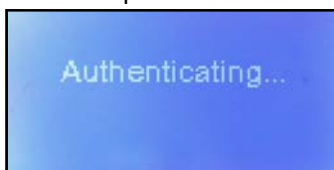

if no other routers are entered authentication begins



after connection radio checks for software upgrades




then starts connecting to your subscribed mosque



and starts receiving the broadcast

### If your preferred or Home Channel mosque is not broadcasting

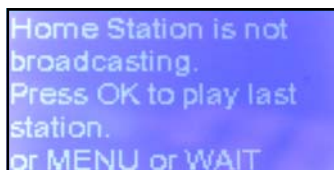 


if your mosque is not broadcasting you will get this message



to go back to the main menu press **MENU** button



selecting "Nabishi Stations" will list all mosques on our broadcast system

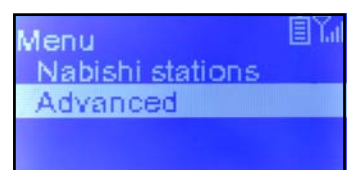

the "Advanced" selection will enable advanced features of the radio

## "How to".....

### To go to the HOME CHANNEL



In normal operation the SNOOZE button on top of the radio is used to temporarily silence the alarm which you may have setup in the clock.

If you have a HOME CHANNEL setup on your receiver then pressing the SNOOZE button when you are listening to any other channel will take you quickly to the HOME CHANNEL.







You can identify a HOME CHANNEL has an Asterisk symbol \* at the beginning



### To find other Internet radio channels





Use the Menu then the Rotary Knob to navigate

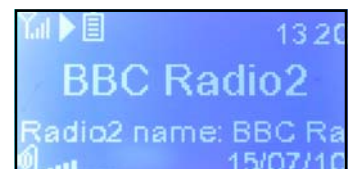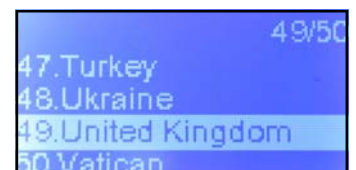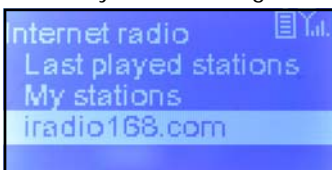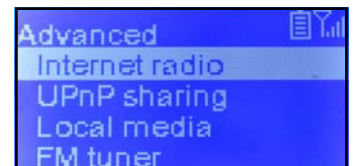

### To select your previously played channels




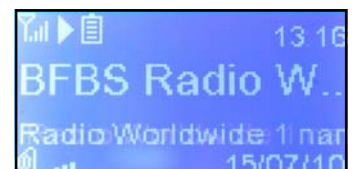
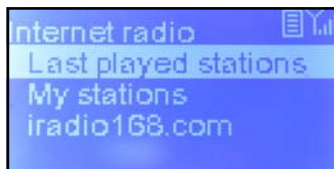


### To add a station to your "My Stations" list

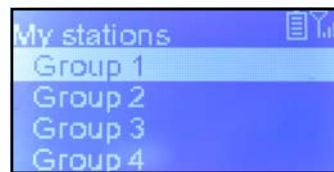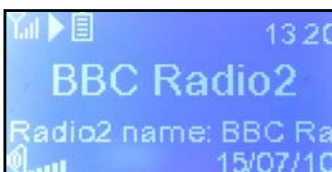

Adding an Internet radio station to the 'My Stations' list from front buttons. Short press "Prog" Select the Group you wish to save the station to Press and hold "Prog" for a couple of seconds then Press Enter. Screen will show "Station Added"


### To delete a WiFi router from the radio

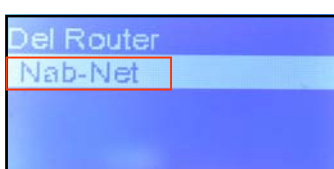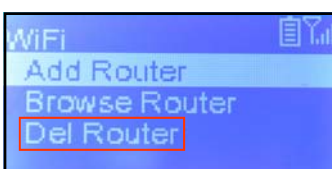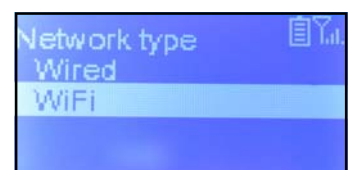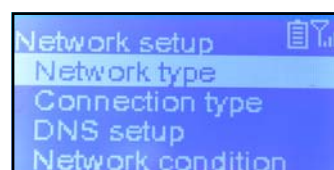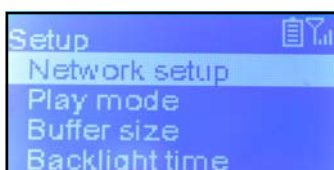

If you have entered an incorrect Security Key into the Router you must delete the Router and start again. After selecting the router you want to delete, highlight it with the Rotary Knob and press the knob in to delete.

"How to" continued .....

To Manually add a WiFi Router

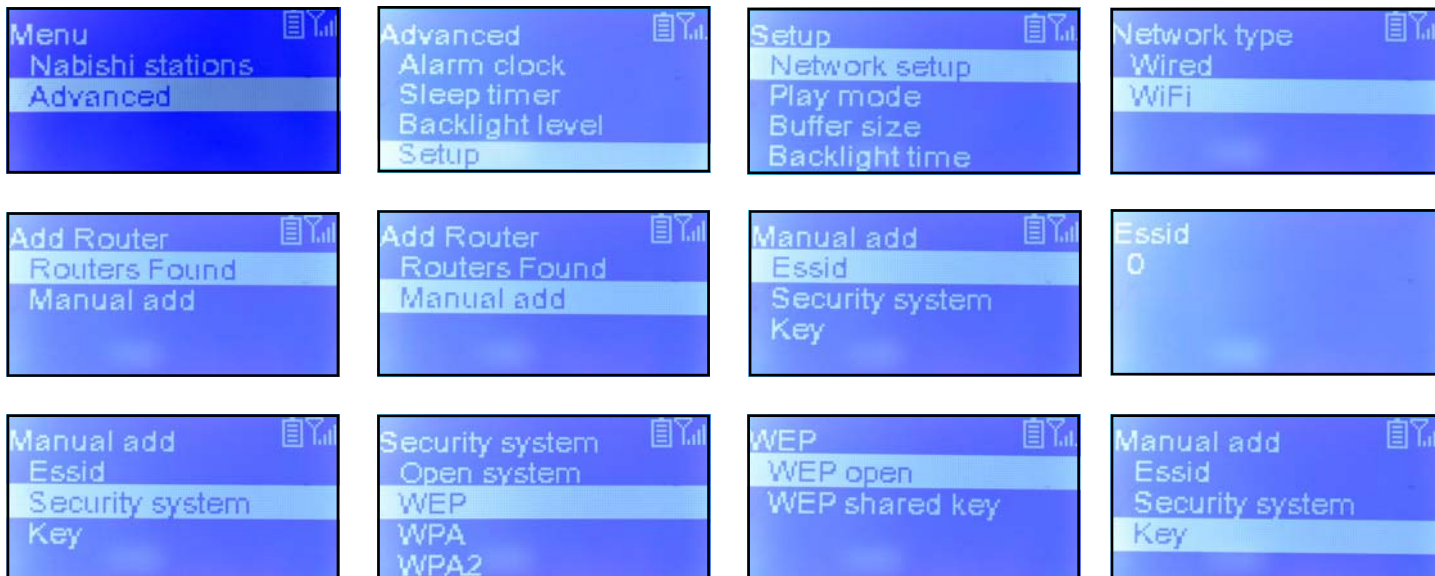

Use these buttons on the radio to setup the Security Key




Input the password by **TURNING** Rotary Knob. **LEFT** or **RIGHT** to select one of the following characters:

0,1,2,3,4,5,6,7,8,9, period, space, @, a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z, A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, #, \$, %, ^, &, \*, (, ), space, -, +, =, /, [, ], , , ; :

When all the numbers have been entered press the knob to **ENTER** on the last digit. Do not add a space



Use the **FORWARD** button to go to the Next position

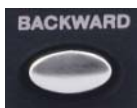

Use the **BACKWARD** button to go back to the previous position




delete a character with the **PROG** (Program) key



Press knob **in** to **Enter**



Finding a Security key for your WiFi connection

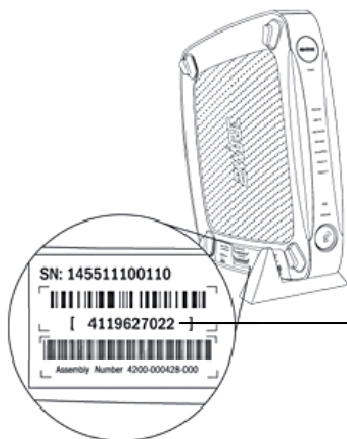

If your Router has a WiFi function then it will probably have the Security Key feature enabled. You will need to install the Security Key when setting up the WiFi connection.

Security keys are usually located on the back of a Router or you will need to ask your supplier to obtain the key

Register your radio and get a free 24 month warranty at [www.azaan.co.uk/home](http://www.azaan.co.uk/home)

**Nabishi UK Ltd**

16c Upton Road, Tilehurst, Reading, Berkshire, RG30 4BJ, England, United Kingdom  
 Tele: +44 (0) 118 943 3311, Fax: +44 (0)118 943 3366

email: [sales@nabishi.com](mailto:sales@nabishi.com) - website: [www.azaan.co.uk](http://www.azaan.co.uk) and [www.nabishi.com](http://www.nabishi.com)